



**ELECTRONIC WATER TIMER “VIDEO-2”:** UP TO TWO WATERING CYCLES PER DAY; WATERING CYCLE TIME FROM 1 MINUTE TO 23 HOURS AND 59 MINUTES. POWER SUPPLY: ONE 9 VOLT ALKALINE BATTERY.

- KEYPAD**

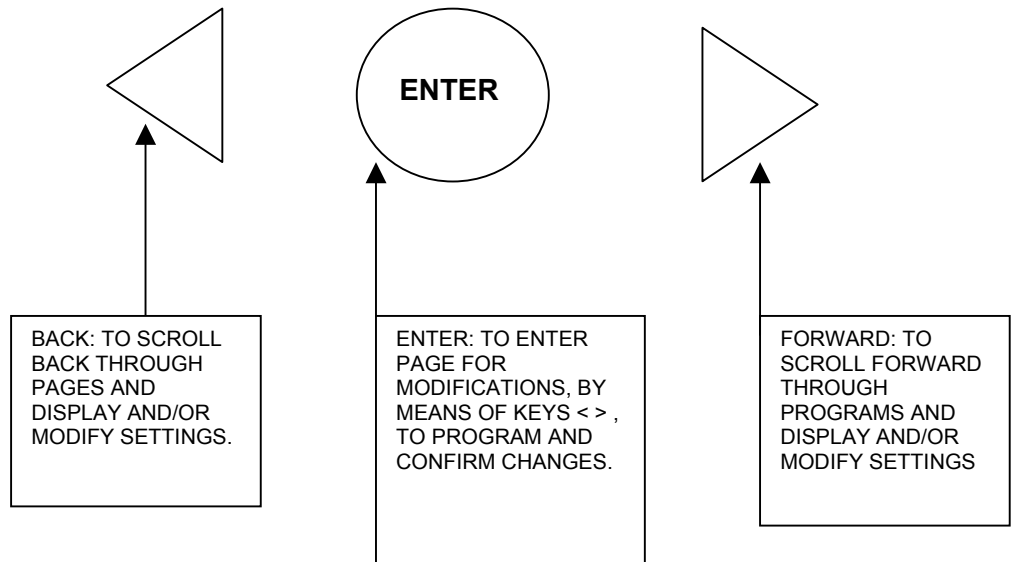



- DISPLAY**

- PAGE DISPLAYING CURRENT TIME (CLOCK) AND NO PROGRAMMED WATERING CYCLE.

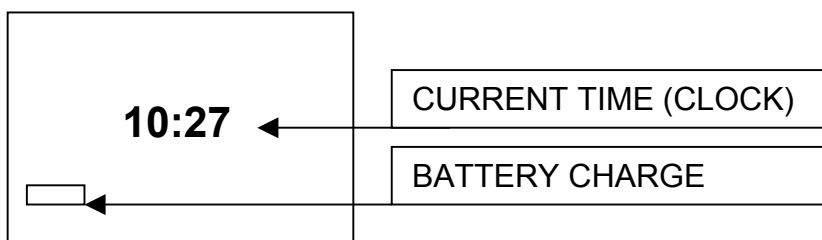

**SETTING THE CURRENT TIME:** PRESS **ENTER** AND THE MESSAGE **OK** APPEARS ON THE BOTTOM RIGHT OF THE DISPLAY; USE THE KEYS **FORWARD** (RH) OR **BACK** (LH) TO INCREASE OR DECREASE THE TIME AND WHEN THE CORRECT TIME IS DISPLAYED PRESS **ENTER** ; THE MESSAGE **OK** DISAPPEARS FROM THE DISPLAY AND THE TIME SETTING IS SAVED.

2. **DAILY PROGRAMMING PAGE**, THIS IS THE FIRST PAGE DISPLAYED AFTER PRESSING **FORWARD** FROM THE TIME SETTING DISPLAY AND IS USED FOR SETTING (OPEN) THE FIRST WATERING CYCLE. THE TIME, PRECEDED BY THE NUMBER 1 IS DISPLAYED.

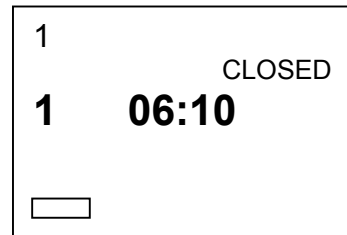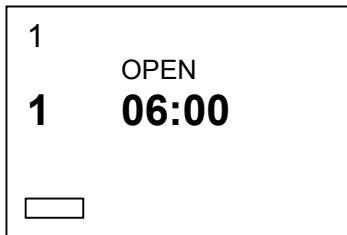


**OPEN:** TO PROGRAM OPENING, PRESS **ENTER**, AND THE MESSAGE **OK** APPEARS AT THE BOTTOM RIGHT OF THE DISPLAY. USE THE KEYS **FORWARD** OR **BACK** TO SCROLL THROUGH TO THE PRE-SET OPENING TIME, E.G. 06:00; THE NUMBER 1 APPEARS AT THE TOP LEFT OF THE DISPLAY TO INDICATE THE FIRST PROGRAMMED WATERING CYCLE. PRESS **ENTER** TO CONFIRM THE TIME; THE MESSAGE **OK** DISAPPEARS FROM THE DISPLAY.

**CLOSED:** ONCE THE OPENING TIME IS STORED BY PRESSING **ENTER**, PRESS **FORWARD** TO DISPLAY THE CLOSING TIME PROGRAMMING PAGE (**CLOSED**). THE PROGRAMMER AUTOMATICALLY SETS THE CLOSURE TIME OF 1 MINUTE AFTER OPENING, WHICH IN THE CASE OF THE EXAMPLE WOULD BE 06:01. TO MODIFY THIS SETTING, FOR EXAMPLE TO SET THE TIME 06:10, PRESS **ENTER** TO ACCESS THE MODIFICATIONS PAGE; THE MESSAGE **OK** APPEARS AT THE BOTTOM RIGHT OF THE DISPLAY. SCROLL FORWARD THROUGH THE MINUTES AND PRESS **FORWARD** UNTIL 06:10 IS DISPLAYED, THEN PRESS **ENTER** TO CONFIRM (THE MESSAGE **OK** DISAPPEARS FROM THE DISPLAY). IN THIS WAY THE FIRST WATERING CYCLE IS SET TO OPEN AT **06:00** AND CLOSE AT **06:10**.

**IMPORTANT: WHEN PROGRAMMING, ALWAYS SET THE TIME IN THE FIRST WATERING CYCLE IN THE SEQUENCE (FOR EXAMPLE): OPENING N°1-06:00; OPENING N°2-22:00. NEVER REVERSE THE SEQUENCE, I.E. 22:00 BEFORE 06:00, OTHERWISE PROGRAMMED OPENING WOULD BLOCK AT 23:58.**

USE THE **FORWARD** KEY AGAIN TO SCROLL THROUGH THE PAGES TO PROGRAM THE SUBSEQUENT SETTINGS, DISPLAYING 00:00 PRECEDED BY THE NUMBER 2 FOR THE SECOND PROGRAMMED WATERING CYCLE . PROGRAM ALL CYCLES AS DESCRIBED ABOVE.

FOLLOWING ENTRY OF THE OPENING AND CLOSING TIMES, SCROLL THROUGH THE PAGES WITH THE **FORWARD** KEY TO DISPLAY THE **WEEKLY PROGRAMMING** PAGE.

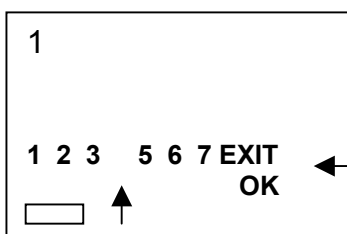


WEEKLY PROGRAMMING. IN THE EXAMPLE, DAY 4 IS EXCLUDED, THEREFORE IF TODAY IS THE FIRST DAY OF THE PROGRAM, THAT IS DAY 1=THURSDAY, THEN THERE WILL BE NO WATERING CYCLE TOMORROW.

3. **WEEKLY PROGRAMMING PAGE.**


THE NUMBERS INDICATING THE DAYS OF THE WEEK APPEAR AT THE BOTTOM OF THE DISPLAY. NUMBER 1 COINCIDES WITH THE **FIRST DAY OF THE PROGRAM**. FOR EXAMPLE

IF THE FIRST PROGRAMMING DAY IS TODAY, I.E. THURSDAY, THE FIRST PROGRAM IS SET AS THURSDAY =DAY 1. TO ACTIVATE THE WEEKLY PROGRAMMING FUNCTION, WHEN THE PAGE IS ON DISPLAY, PRESS **ENTER** AND THE MESSAGE **OK** APPEARS AT THE BOTTOM RIGHT OF THE DISPLAY. NOW USE THE **BACK** KEY TO MOVE THE CURSOR (DISPLAYED BELOW **EXIT**), AND ALIGN IT WITH THE DAY OF THE WEEK TO EXCLUDE FROM THE WATERING CYCLE. PRESS **ENTER** AND THE DAY IS DELETED FROM THE DISPLAY. TO RESTORE THE DAY, SIMPLY PRESS **ENTER** AGAIN. IN THIS WAY, USE THE **FORWARD** AND **BACK** KEYS TO SELECT AND INCLUDE/EXCLUDE DAYS OF THE WEEK AS REQUIRED. TO EXIT THE WEEKLY PROGRAMMING FUNCTION, POSITION THE CURSOR BELOW **EXIT** AND PRESS **ENTER**; THE CURSOR AND MESSAGE **OK** DISAPPEAR FROM DISPLAY.

4. **MANUAL PROGRAMMING PAGE.** FROM WEEKLY PROGRAMMING, PRESS THE **FORWARD** KEY TO PASS ONTO THE MANUAL PROGRAMMING FUNCTION. THE MESSAGE **MANUAL** APPEARS AT THE TOP OF THE DISPLAY. TO ENABLE MANUAL PROGRAMMING, PRESS **ENTER**, THE MESSAGE **OK** APPEARS AT THE BOTTOM RIGHT AND **CLOSED** AT THE TOP RIGHT OF THE DISPLAY. TO OPEN THE VALVE PRESS **BACK**; THE MESSAGE **CLOSED** DISAPPEARS, AND THE MESSAGE **OPEN** APPEARS NEXT TO **MANUAL**. TO SUSPEND WATERING PRESS **FORWARD** AND THE MESSAGE **OPEN** DISAPPEARS AND **CLOSED** COMES BACK ONTO THE DISPLAY. THE VALVE IS CLOSED. IF WATERING IS NOT STOPPED MANUALLY, THE VALVE CLOSES AUTOMATICALLY AFTER 15 MINUTES. TO EXIT THIS PAGE FROM THE **CLOSED** PHASE, PRESS **ENTER**, THEN USE THE **FORWARD** KEY TO RETURN TO THE CURRENT TIME DISPLAY.

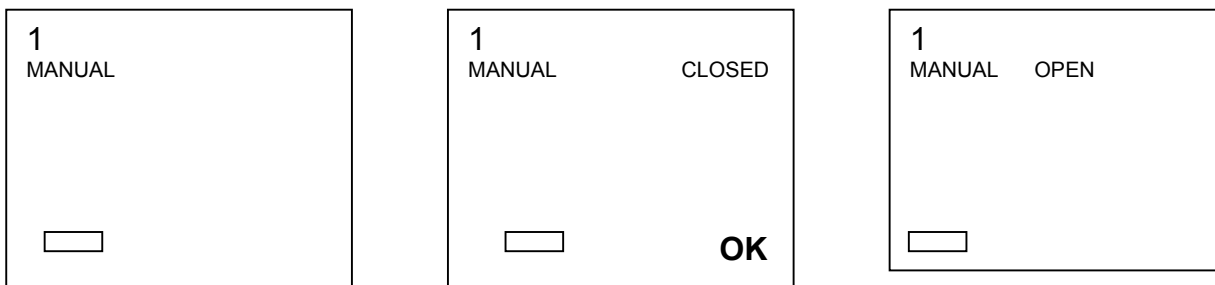

5. **CANCELLING A PROGRAM.** USE THE **FORWARD** KEY TO IDENTIFY THE PROGRAM TO BE CANCELLED, ENTER THE **CLOSED** PHASE, AND PRESS **ENTER**; THE MESSAGE **OK** APPEARS AT THE BOTTOM RIGHT OF THE DISPLAY. PRESS THE KEYS **FORWARD-BACK** SIMULTANEOUSLY, (THE **BACK** KEY SLIGHTLY IN ADVANCE); THE MESSAGE **OK** DISAPPEARS, THE TIME IS RESET AND THE ASSOCIATED NUMBER OF THE WATERING CYCLE DISAPPEARS FROM THE DISPLAY.

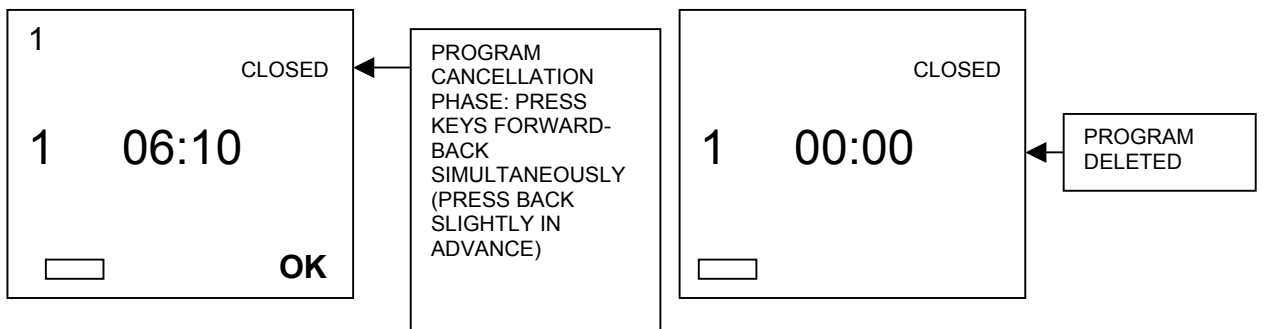

## 6. DISPLAY READING FROM CURRENT TIME PAGE

